

OPC UA License request and installation

To use the OPC UA URCap, you will need to obtain a valid licence file for the robot in question.

The license can be temporary or permanent. A temporary license can be installed on any robot for evaluation purposes. A permanent license is always bound to a specific robot with its serial number.


1. Requesting a license

Permanent licenses require a unique license request that is generated on the robot. Perform the following steps to get a valid license request on a USB disk:

- Insert a USB drive into the robot
- Click the “Copy license request to USB” button in the OPC UA URCap
- Disconnect the USB drive

Send the request file to license@rocketfarm.no. Rocketfarm will return a valid license file for this specific robot.

You will find the license request button in the OPC UA URCap. See image below.

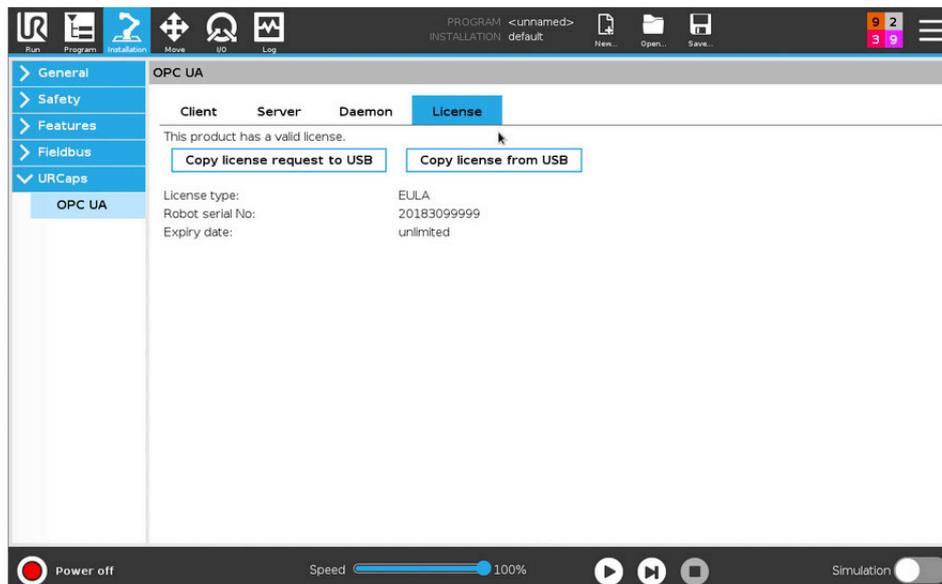

2. Installing a license file

After receiving a license file from Rocketfarm, perform the following steps:

- Copy the license file to the root folder on a USB drive
- Connect the USB drive to the robot
- Click the “Copy license from USB” button, in the OPC UA URCap
- Disconnect the USB drive

The OPC UA “Enable daemon” button should now be available to activate and use the URCap.

Any questions?

If you have any questions regarding OPC UA URCap license, please contact us at opc@rocketfarm.no